



AVITECH

How to Save a Preset

This instructional document covers the steps required to save presets in your MCC-8000 or VCC-8000 series using Galaxy. If you need instructions on how to back up presets to your computer hard drive, please view the document "Backup and restoring presets."

Saving to Flash

There are two times you need to use the save to flash feature. The first time is after you have created the master layout you want the unit to load when the unit is power cycled. The second time is after you are done saving presets and you want to save all the presets you created into the internal flash memory of the module. If this is skipped, the module will lose all the presets that were saved in memory.

To Save to Flash:

Select Load File or Save File from the Option menu
Select Update to Module Flash

Or

Close Galaxy and select Yes when prompted to save

Saving a Preset

All the presets you create get stored in the module and not in the computer that is running Galaxy. In order to write all the presets into the internal flash memory of the module after creating all the presets, you will need to save to flash.

To save a preset:

1. Configure the layout to how you want the output to look
2. Select Save File from the Option menu
3. Enter a name for the preset and select OK to save
4. Repeat for all additional layouts
5. After you are done creating presets, load the file that you want to be the master layout that gets loaded when the unit is powered on
6. Follow the directions above to save to flash

Technical Support

If you have any questions regarding the information provided in this guide, please call our technical support line at 425-885-3863 or our toll free line at 1-877-AVI-TECH.

To contact the author of this document, please send an email to Thomas@avitechvideo.com.